

How to configure a DHCP IP address

Finding the printer's IP address

1. Connect one end of the Ethernet cable to the port found on the printer and then connect the other end of the cable to an available port on your router.
2. Turn off the printer.
3. Press "FEED" button and turn on at the same time, 5 seconds later release "FEED" button, a completed self-test will be printed out to show printer settings.
4. Confirm the printer IP address. An example IP address would be: 192.168.0.100



Setting the Static IP

1. Open your web browser and type the Star printer's IP address into the URL field.
2. In the left side menu click 'Configuration' and select 'DHCP Client'.

Ethernet WebConfig Version 1.02

- [Information](#)
- [Configuration](#)
- [Printer Status](#)
- [Printer Test](#)

Restart

Configure Ethernet

Settings for the Ethernet Interface

IP Address: ☐ DHCP Client:

DHCP Timeout (s) 90

☒ Fixed IP Address:

Device IP Address	192	.	168	.	0	.	100
Subnet Mask	255	.	255	.	255	.	0
Gateway Address	192	.	168	.	0	.	1

Restore Default

Save

cancel

Copyright © 2006-2015 POS All rights reserved.

3. Click 'Save'.
4. Click "Restart" on the left side menu.